

Mounting of pulse switch type CG – CS11RT on weigher:

The plate with the pulse switch attached is delivered not mounted together with the weigher.

The parts are packed separately with bolts and knots.

The plate shall be mounted on the frame of the weigher as shown on *picture 1* by using the two existing holes in the frame.


After mounting check the function of the switch by moving the hopper from side to side.

Normally wire connection is between **blue** and **brown** wire. *Picture 2* This gives a short signal each time the hopper tips across the middle.

Connecting the wires between black and black gives a short break of the signal each time the hopper tips across the middle.

The cord should be attached in such a way that it doesn't interfere with any of the moving parts of the weigher.

Picture 1

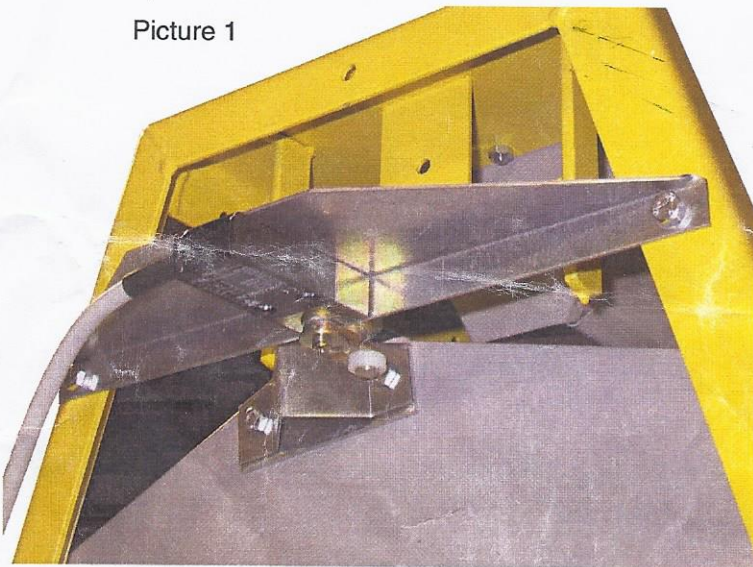

Picture 2

